



10-Cup Percolator Instruction Manual

MODEL: DK-10



Ginnys.com • 1.800.544.1590

*"Life is happening.
We'll help you live it...one moment at a time."*



Thank you for purchasing a Ginny's Brand 10-Cup Percolator! Its shiny, stainless steel finish will brighten your counters and add a touch of retro charm. And if you've never experienced it, percolating your coffee is easy and entertaining— like a memory from simpler times. When the coffee starts to gurgle and bubble up against the lid, you'll know that a piping hot, unmistakably rich brew is ready for pouring (and drinking). Enjoy!

Ginny

President, Ginny's

TABLE OF CONTENTS

Important Safeguards	3
Specifications	4
Part Names	5
How to Operate	6
Cleaning & Care	7
Warranty	8

IMPORTANT SAFEGUARDS

When using your percolator, basic safety precautions must always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. **DO NOT REMOVE LID DURING BREWING CYCLES.** Scalding may occur if lid is removed during the brewing cycles.
4. Do not use the percolator without Coffee filter, Filter cover and Water pipe. **THIS APPLIANCE IS NOT A WATER BOILER.**
5. Never plug on the percolator without water inside its pot, or the appliance will cutoff automatically. Element inside may burn out.
6. Do not add water beyond the max. cups level.
7. To protect against fire, electric shock or injury to person, do not immerse cord, plug in water or other liquid.
8. Close supervision is necessary when the percolator is in use or when coffee is hot. Do not allow children to use this percolator.
9. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the percolator.
10. Do not operate this percolator when the power cord or plug damaged or if the appliance malfunctions, is dropped or has been damaged in any manner. Call Ginny's Customer Service for a replacement or return at our toll-free number.
11. The use of accessory attachment not recommended by the appliance manufacturer may result in fire, electric shock or injury to person.
12. Do not use outdoors.
13. Do not let cord hang over edge of table and counter, or touch hot surface.
14. Do not place on or near a hot gas or electric burner, or in a heated oven.
15. Do not move the percolator while it is heating. Unplug the power cord before you move the appliance to pour coffee.
16. Always attach plug to appliance first, then plug cord into wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
17. Do not use this appliance for other than intended use.

SAVE THESE INSTRUCTIONS

No user-serviceable parts inside. A short cord is provided to reduce the hazards resulting of entanglement or tripping over a long cord. An extension cord may be used with care, however, the marked electrical rating should be at least as great as the electrical rating of this appliance. The extension cord should not be allowed to drape over the counter or tabletop where it can be pulled on by children or tripped over.


FOR HOUSEHOLD USE ONLY

To reduce the risk of electrical shock, this percolator is equipped with a polarized plug, in which one prong is wider than the other. This plug is intended to fit into a polarized outlet only in one direction. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SPECIFICATIONS

Product Size:	5.75" diam. x 12" H
Cord Length:	24"
Rate:	AC 120V 60Hz
Wattage:	800W
Capacity:	10 cups/56 oz.

PART NAMES

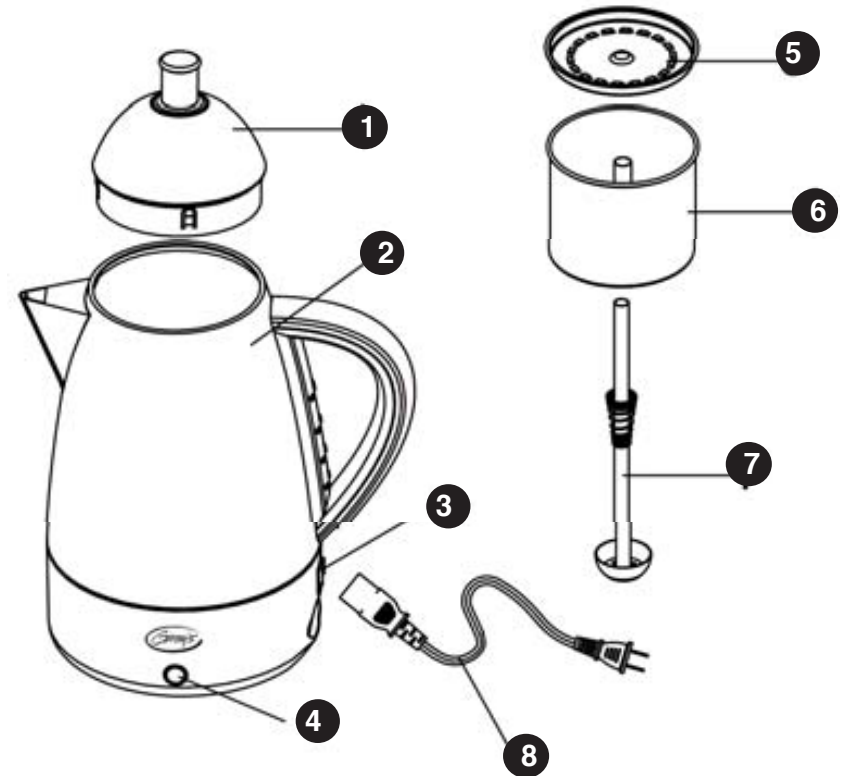

1. Lid
2. Percolator
3. Power Switch
4. Keep Warm Indicator Light
5. Basket Cover
6. Coffee Basket
7. Water Pipe
8. Power Cord

BEFORE USING THE FIRST TIME

1. Read all instructions carefully.
2. Take the percolator and all accessories out of the packaging carefully.
3. Clean the percolator with a warm, damp cloth.

Note: Do not immerse the percolator in water or any other liquid.

HOW TO OPERATE

1. Add water:

Take the coffee basket, basket cover and the water pipe out, and add cold water into the pot according the number of cups you want. (See cups level marked inside the pot).

Note: Do not use hot water.

Do not add water beyond the max. cups (10) level.

2. Add coffee:

Add proper amount of coffee into the coffee basket, You can adjust the amount, based on your own preferences.

Note: Do not add too much coffee,. The level of coffee should be lower than the edge of the coffee filter by 1/2", or the coffee may over flow during heating. Put the basket cover on the coffee basket. Fit the water pipe into the bottom of the coffee basket, and put them into the percolator carefully until you fit the bottom base of the water pipe into the heating cup.

3. Heating coffee:

Close the lid and press down to lock it in position. Connect the power cord to an outlet. Turn on the power switch to start brewing coffee.

Note: Do not open the lid when the percolator is heating.



4. Keep warm coffee:

When the temperature of the water reaches about 210°F, it shows that the coffee is brewed. The percolator will switch to keep warm automatically. The keep warm indicator light will turn on, and keep the coffee inside the pot hot.

5. After using:

Unplug the percolator after using. Allow the percolator to cool before cleaning.

NOTE: Clean the internal surface of heating cup after each use.

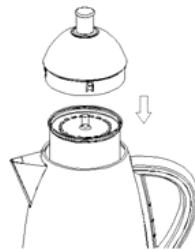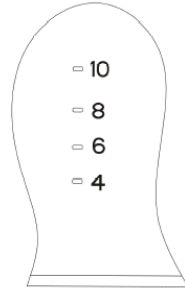

CLEANING & CARE

NOTE: DO NOT IMMERSE THE PERCOLATOR, POWER BASE, POWER CORD OR PLUG IN ANY LIQUID. ALWAYS UNPLUG THE PERCOLATOR BEFORE CLEANING.

1. Make sure that the percolator has been switch off and cooled down before cleaning. Always keep the percolator base dry.
2. Clean the percolator shell with a damp cloth.
3. Clean the basket cover, coffee basket and water pipe with warm water.
4. Pour some water into the pot, rinse and clean the inside surface and the heating cup gently with a soft brush. Wipe with a dry cloth.

WARRANTY

Ginny's warrants this product free from defects in material and workmanship for one year from provable date of purchase.

Within this warranty period, Ginny's will repair or replace, at its option, defective parts at no charge, provided the product is returned, freight prepaid with proof of purchase to Ginny's.

Allow 2-4 weeks for return shipping.

This warranty does not cover improper installation, misuse, abuse or neglect on part of the owner.

Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

This warranty gives you specific legal rights and they may vary from state to state.

THE FOREGOING WARRANTIES ARE IN LIEU
OF ALL OTHER WARRANTIES AND CONDITIONS,
EXPRESS OR IMPLIED,
INCLUDING BUT NOT LIMITED TO THOSE OF
MERCHANTABILITY OR FITNESS
FOR A PARTICULAR PURPOSE.



Customer Service

Phone: 1-800-544-1590

8:00 am to Midnight, Monday through Friday