

Montgomery Ward™

Montgomery Ward™

Great for
small spaces,
touch-ups,
or sudden
spills!

Floor Sweeper



Instruction Manual

MODEL: V2811
120V~, 60Hz, 600W

Montgomery Ward Customer Service
3650 Milwaukee Street, Madison, WI 53714
8:00 am to midnight, Monday through Friday

Wards.com 1-888-557-3848

Wards.com 1-888-557-3848



Thank you for purchasing your Floor Sweeper by Montgomery Ward™. We guarantee that it will perform to the highest standard, time after time, with all the convenience, easy cleanup and durability you rely on from Wards.

Your new, pivoting-head floor sweeper, with built-in rollers and an angled nylon brush, is easier on your back and more efficient than a broom and dustpan—and faster than lugging out the big vacuum! A low profile makes it easy to store, so it's always ready for touch-ups and sudden spills.

Table of Contents

- Important Safeguards 3
- Polarized Plug..... 4
- Parts & Features..... 4
- Operating Instructions 5
- Warranty & Return Information 6–7

Important Safeguards

PLEASE READ THESE INSTRUCTIONS BEFORE USE

Basic safety precautions should always be followed when using your Floor Sweeper, especially when children are present.

WARNING: TO AVOID THE RISK OF ELECTRICAL SHOCK, ALWAYS MAKE SURE THE PRODUCT IS UNPLUGGED FROM THE ELECTRICAL OUTLET BEFORE ASSEMBLING, DISASSEMBLING, SERVICING OR CLEANING

1. To protect against electrical shock, do not place cord, plug or appliance in water or other liquid.
2. Do NOT use this product to pick up liquids, toxic substances or flammable liquids.
3. Extra caution should be used when any appliance is near children.
4. Unplug from outlet when not in use and before cleaning.
5. Do NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Call our toll-free customer service number for information regarding replacement, or returning the product.
6. The use of accessory attachments not recommended by the appliance manufacturer may cause personal injury or damage to the appliance.
7. Do NOT use outdoors or on wet surfaces.
8. Do NOT let cord touch hot surfaces.
9. Do NOT use appliance for other than its intended use.
10. To disconnect, turn control to “OFF,” then remove plug from wall outlet. Do NOT pull on power cord.
11. Keep loose clothing, hair or other body parts away from openings and moving parts.
12. Do NOT attempt to attach/detach accessories while unit is running.
13. NEVER use Floor Sweeper without its filter.

PLEASE SAVE THESE INSTRUCTIONS


THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY

© 2014 Montgomery Ward, Inc. All rights reserved.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

Parts & Features

*Removable Filters (not shown)

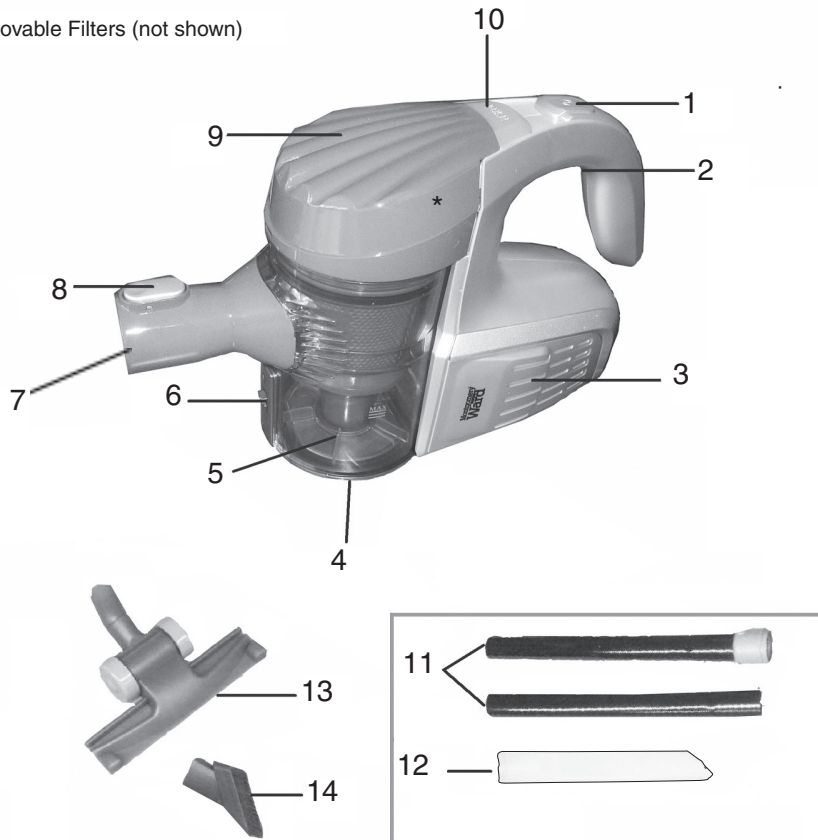

- | | |
|-------------------------------|-------------------------------|
| 1. Power Switch | 8. Attachment Button |
| 2. Handle | 9. Dust Cup Cover |
| 3. Air Outlet | 10. Dust Cup Lock |
| 4. Dust Cup Bottom Cover | 11. Extension Wands |
| 5. Dust Cup | 12. Crevice Tool |
| 6. Dust Cup Bottom Cover Lock | 13. Floor Brush |
| 7. Nozzle | 14. Adjustable Bristled Brush |

Power:

To turn the Floor Sweeper on, press down on the Power Switch. To turn off, press the Power Switch a second time.

Attachments:

Select attachments as needed for floor, upholstery or crevices. If the Extension Wand is needed, insert it into the Nozzle by pressing the Attachment Button to lock the Extension Wand into place.

Cleaning the Dust Cup:

Press down on the Dust Cup Bottom Cover Lock to release the Dust Cup Cover and empty the contents. Push down on the Dust Cup Lock to release the Dust Cup. Remove the Dust Cup Cover to clean the filters as needed.

Floor Sweeper Filters:

Your Floor Sweeper comes equipped with 2 different filters: a HEPA and a sponge filter. These filters are reusable and should be wiped clean with a damp cloth periodically.

Cleaning the Filters:

Press down on the Dust Cup Lock. Lift up on the tab of the Dust Cup Cover to remove the cover. Remove the two round filters and tap on a hard surface to remove the debris. Wipe with a damp cloth if needed. Do NOT place damp or wet filters in the Dust Cup. Remove the plastic cone-shaped assembly. Tap the assembly to remove any debris. Wipe with a damp cloth if needed.

Important:

Optimum cleaning results will be achieved faster with a clean filter and empty dust cup.

NOTE: See "Max" lines on the body of the dust cup. Do NOT allow the dust to accumulate beyond this mark.

If any item, for any reason, does not meet your expectations, just return it to us. We'll gladly either:

- Refund your merchandise amount
- Credit your account
- Send a replacement

You can return any unused item in its original packaging within 60 days of its receipt for a full refund of the purchase price (excluding shipping and processing charges).

Please send returns to:

**Montgomery Ward, Inc.
Attn: Customer Returns
2000 Harrison Suite 100
Clinton, IA 52732-6676**

When returning an item:

- Use the original packaging and pack it securely.
- Please adequately insure your item in case you need to make a claim with the carrier you choose for returning your item.
- Include your order number and reason for return.
- We recommend keeping the receipt for 4 weeks.



1 Year Limited Warranty

Montgomery Ward, Inc. warrants this product to be free from defects in material and workmanship for one year from provable date of purchase.

Within this warranty period, Montgomery Ward will repair or replace, at its option, defective parts of this product at no charge, provided the product is returned, freight prepaid with proof of purchase to Montgomery Ward. Allow 2-4 weeks for return shipping.

This warranty does not cover improper installation, misuse, abuse or neglect on part of the owner. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

This warranty gives you specific legal rights and they may vary from state to state.

THE FOREGOING WARRANTIES ARE IN LIEU OF ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THOSE OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Montgomery Ward Customer Service
8:00 am to Midnight CST, Monday through Friday

Wards.com 1-888-557-3848