 




COOL TOUCH TOASTER

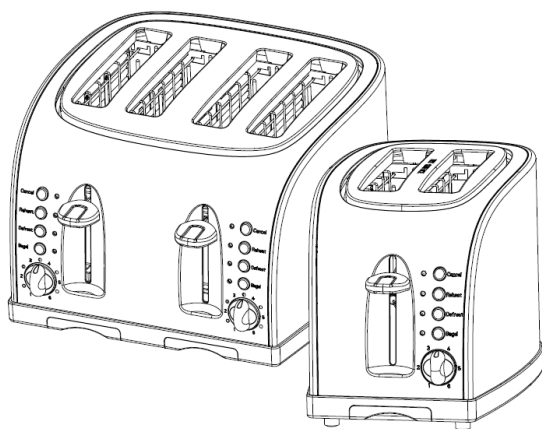

INSTRUCTION MANUAL

Model: VE-73: 2-Slice Toaster
120VAC 60Hz 900W

VE-74: 4-Slice Toaster
120VAC 60Hz 1560W

www.Ginnys.com

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against risk of electrical shock, do not immerse cord, plug or toaster in water or other liquid.
4. Close supervision is necessary when toaster is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, or moving toaster.
6. Do not operate toaster with a damaged cord or plug or after toaster malfunctions or has been dropped or damaged in any manner. Call our toll-free customer assistance number for information on examination, repair, or electrical or mechanical adjustment.
7. The use of accessory attachments not recommended by the toaster manufacturer as it may cause injuries.
8. Do not let cord hang over edge of table or counter, or touch hot surfaces.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Do not use outdoors.
11. Do not use toaster for other than intended use.
12. Do not insert oversized foods, metal foil packages, utensils, or the plug and power cord in the toaster bread wells as these items may involve a risk of fire or electric shock.
13. A fire may occur if toaster is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
14. Do not attempt to dislodge food when toaster is plugged in.
15. This product is for household use only.
16. Failure to clean crumb tray may result in a fire hazard.
17. Do not operate toaster while unattended.
18. Before unplugging toaster, make sure bread lifter is in "up" position
19. Do not cook, warm, or toast rice cakes, fried foods, or non-bread items.
20. Safeguard toaster from access to pets.
21. Do not clean with metal scouring pads. Pieces can break off pad and touch electrical parts resulting in risk of electrical shock.

SAVE THESE INSTRUCTIONS

www.Ginnys.com

Consumer Safety Information

This appliance is intended for household use only. NEVER LEAVE TOASTER UNATTENDED!

This toaster becomes hot during use. To avoid risk of burns, DO NOT TOUCH HOT SURFACES. Allow toaster to cool before touching, lifting, cleaning or storing.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in, or tripping over a longer cord.

If a longer cord is necessary an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the toaster. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

 
POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm, do not use that outlet.

www.Ginnys.com

PARTS AND FEATURES

1. Removable Slide-out Crumb Tray.
2. Extra wide toasting slots with bread guides.
3. Bread Lifter: Push down bread lifter to start toaster. To stop toasting, push the cancel button during a cycle. To lift, place index finger under lifter and thumb on top edge of toaster directly above lifter. Lift up firmly.
4. Toast Boost: After toast lever has popped up, use your finger to lift toast lever up another 1/2-inch higher to aid retrieval of small items from slot.
5. Indicator light
6. Browning Selector: The shade selector ranges from light toast (setting 1-3) to dark toast(setting 4-6). Adjust to desired setting before using.
7. Control Buttons:

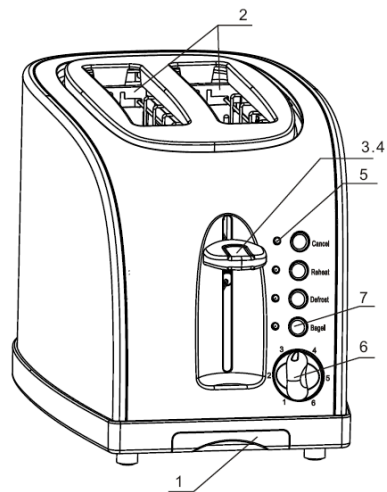


Cancel button- This light will be illuminated as long as the toaster is on. To end toast cycle at anytime in any cycle, press the Stop button. The cycle will stop and the light will go out.

Defrost- AFTER the toasting cycle has started, press the Defrost button. The Defrost light will come on and some additional time will be added to the cycle to thaw the toast item.

Reheat button- AFTER the toasting cycle has started, press the Reheat button. The Reheat light will come on and the original toasting cycle will be canceled and replaced with a 30-50 second Reheat cycle.

Bagel- Load the toaster with the cut sides of the bagel facing out. AFTER the toasting cycle has started press the Bagel button. The Bagel light will come on and the inside heating element will turn off. The Defrost OR Reheat buttons can be used in conjunction with Bagel button, but Defrost and Reheat can NEVER be used at the same time.

 CAUTION: Never try to reheat any food product that has been spread with margarine, butter, or any other spread.

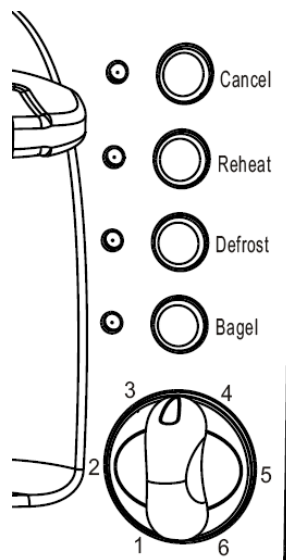

BEFORE YOUR FIRST USE

Carefully unpack your new toaster and remove all of the packaging materials. To remove any dust that may have accumulated during packaging, you should wipe the toaster exterior with a clean, damp cloth. Wipe dry or allow to air dry thoroughly. Do not use harsh or abrasive cleaners. Never put the toaster, cord, or plug in water.

HOW TO USE

1. Stand the toaster on an even, heat-resistant surface.
2. Place the slice of bread in the slot.
3. Select the toast darkness on the dial.
4. Plug the toaster in.
5. Press the toast lever down until it is retained at the bottom of the toaster. The toasting cycle will then begin.
6. When the toasting cycle ends, the bread will pop up automatically and the toaster will switch off. If you wish to toast more bread, wait 1 or 2 minutes before using the toaster again.
7. The toaster lever can be moved up during toasting to check the browning of the toast without the cycle being cut off.
8. When you finish using the toaster, unplug it and wait for it to cool down before putting it away.
9. To stop the toasting cycle sooner, push the Stop button.

WARNING!

- ◆ Do not operate while unattended.
- ◆ Do not cook, warm, or toast rice cakes, fried foods, or non-bread items.
- ◆ Heat pastry-filled or frosted items on lightest setting.
- ◆ Do not cover toaster or use near curtains, drapes, walls, or under cabinets.
- ◆ Close supervision is necessary when used by or near children.
- ◆ Never cover toaster or toast slots during operation.
- ◆ Always unplug toaster when not in use.
- ◆ Failure to follow these instructions can result in death or fire.

TIPS FOR USE

Types of bread

Sliced bread is the most suitable for use in this toaster. If you wish to use other types of bread, bear the following in mind:

 
- Cut the bread into regular-shaped slices with an even thickness of around 1 cm.
- Do not toast different types of bread at the same time, or slices of different thicknesses.
- Do not spread butter, oil or similar on the bread before toasting.

Selecting toast darkness

- Toasting is affected by the temperature of the bread. Room temperature bread may toast to a medium color on setting 3. The same type of bread that has been refrigerated may require setting 4, and if frozen, setting 5.
- The moisture content will also affect toasting. Fresh bagels, made locally, will have a higher moisture content than bagels purchased in the bread section of the supermarket. The bagel setting only energizes the outside wall heating elements. A second, shorter toasting cycle may be needed to reach desired brownness. Fresh bagels made locally may require two toasting cycles.
- Because of the irregular surface of English muffins, they may require more than one toasting cycle. After toasting for one cycle on setting 6, if a darker shade is desired, adjust shade selector to setting 2 or 3 and toast for a second cycle. Watch closely to avoid over browning. English muffins cut with a knife toast more evenly than English muffins split with a fork.
- Many toasters have thermostats that must reset after toasting one cycle. The electronic controls of this toaster allow toasting batch after batch, with no waiting for the thermostat to reset. -Thick foods may become wedged in the toaster slot. If food becomes jammed, the toaster will automatically shut off at the end of the toasting cycle. Unplug the toaster and let cool. Use a wooden utensil to remove food.
- When toasting only one slice, the bread may be placed in any slot of the toaster. When toasting a single slice, you may notice variations in bread color from side to side.
- Setting 6 is the darkest shade of toast color. If a darker shade is desired, reset at setting 2, watch closely and toast for a second cycle.
- The toaster is designed for even brownness on both sides of the toast, the inner heating elements of the toaster will not be as radiant as the outer heating elements during toasting, it is normal and not a defect. When choosing the toast darkness, remember that dry bread and thin slices toast quicker than fresh bread and thicker slices. The browning selection will therefore vary depending on the type of bread, the quality of the bread and the thickness of the slices.

CLEANING AND MAINTENANCE

- NOTE: If the toaster is used daily, the crumb tray should be cleaned weekly.
- Unplug toaster and let cool.
- Slide open crumb tray, discard crumbs, and wipe tray with clean cloth. Replace crumb tray.
- Wipe outside of toaster with a damp cloth. Do not use abrasive cleansers that may scratch the surface of the toaster.

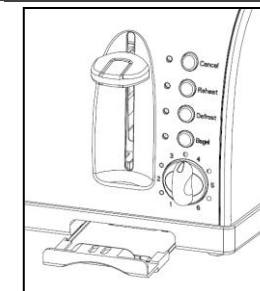

Toasting Chart	
FOOD	SUGGESTED SETTING
Regular Bread	3-4
English Muffins	6 Bagel
Frozen Bread/Buns	3-4 Defrost
Frozen Waffles	1 Defrost
Toaster Pastries	1

NOTE: The appliance manufacturer does not recommend heating toaster pastries in your toaster. Toaster pastries should be heated in a toaster oven broiler. However, if an alternative is not available, and you must use the toaster, be sure to set the toaster to the lowest possible setting, and never leave the toaster unattended during use.

1 YEAR LIMITED WARRANTY

Ginny's warrants this product free from defects in material and workmanship for one year from provable date of purchase.

Within this warranty period, Ginny's will repair or replace, at its option, defective parts at no charge, provided the product is returned, freight prepaid with proof of purchase to Ginny's. Allow 2-4 weeks for return shipping.

This warranty does not cover improper installation, misuse, abuse or neglect on part of the owner. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

This warranty gives you specific legal rights and they may vary from state to state.

THE FOREGOING WARRANTIES ARE IN LIEU OF ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THOSE OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

GINNY'S Customer Returns
2000 Harrison Drive, Suite 100
Clinton, IA 52732-6676
Phone: 563-242-4006
8:00 am to Midnight, Monday through Friday or
Fax: 563-242-4036
www.ginnys.com



Published By:



**1112 7th Avenue
Monroe, WI 53566
USA
608-324-4660**

www.Ginnys.com