



10-CUP PERCOLATOR

User Guide

Item: 735655



Ginnys.com • 800-544-1590

f Facebook.com/GinnysBrand

p Pinterest.com/GinnysBrand

🖱 Ginnys.com/Blog

“Life is happening.

We’ll help you live it...one moment at a time!”

Thank you for purchasing a Ginny’s Brand 10-Cup Percolator! Its shiny, stainless steel finish will brighten your counters and add a touch of retro charm. If you’ve never experienced it, percolating coffee is easy and worthwhile. When the coffee stops gurgling and bubbling up against the lid, you’ll know that a piping hot, unmistakably rich brew is ready for pouring. Enjoy!

TABLE OF CONTENTS

Important Safeguards	3
Electrical Safety and Specifications	4
Get to Know Your Percolator	5
How to Operate	6
Cleaning & Care	7
Warranty	8

IMPORTANT SAFEGUARDS

READ CAREFULLY BEFORE USING AND SAVE THESE INSTRUCTIONS!

- FOR HOUSEHOLD USE ONLY. Do not use this appliance for other than its intended use.
- REMOVE all packaging materials and labels before first use.
- WASH all removable parts before first use. See Cleaning & Care.
- A SHORT CORD is provided to reduce the hazards resulting from entanglement or tripping. If this is a DETACHABLE CORD, always attach it to the appliance first, then to the electrical outlet. Do not drape the cord over the counter or tabletop, where it can be pulled on or tripped over. Never wrap the cord tightly around the appliance, as this could cause the cord to fray or break.
- We do not recommend using an extension cord with this appliance. However, IF AN EXTENSION CORD IS USED, the marked electrical rating should be at least as great as the electrical rating of this appliance.
- CLOSE SUPERVISION is necessary when using this appliance near CHILDREN.
- A fire may occur if this appliance is used near FLAMMABLE MATERIALS, including curtains, towels, walls, etc. Do not place any paper, plastic, or other non-food items in the appliance. Do not place the appliance or its cord on or near a heated surface, or in a heated oven.
- This appliance should always be used on a STABLE, DRY, HEAT-RESISTANT SURFACE. Do not use near water.
- Do not use an accessory or attachment not recommended by Ginny's, as this may cause injury, or damage the appliance.
- DO NOT REMOVE THE LID DURING PERCOLATING.
- Always use OVEN MITTS when handling hot food or appliances. Do not attempt to move an appliance when it is hot, or has hot contents.
- Do not use outdoors.
- Turn OFF AND UNPLUG this appliance when not in use.
- NO SERVICEABLE PARTS INSIDE THIS APPLIANCE.
- DO NOT USE AN APPLIANCE WITH A DAMAGED CORD OR PLUG, OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER.
- Do not use this percolator without the coffee filter, filter cover and water pipe.


ELECTRICAL SAFETY

This appliance is equipped with a detachable, polarized plug. These are safety features to reduce the risk of electrical shock. The plug should be attached to the appliance before connecting to an electrical outlet. The polarized plug will fit into a polarized outlet only one way. If you are unable to insert the plug into the outlet, try reversing the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way. Ginny's cannot accept any liability for damage or injury resulting from failure to observe these safety procedures.

SPECIFICATIONS

POWER RATING	120 V, 60 Hz, 800 W
CAPACITY	10 cups/ 56 oz. total
CORD LENGTH	24"
DIMENSIONS	5.75" diameter x 12" high
MODEL	DK-10

GET TO KNOW YOUR PERCOLATOR

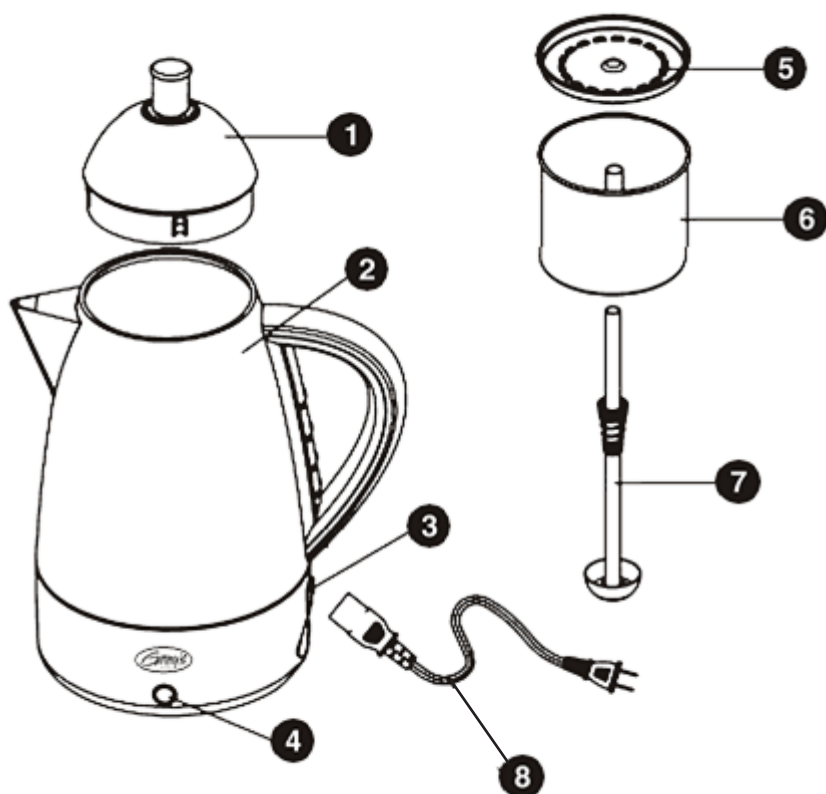

1. Lid
2. Percolator Pot
3. Power Switch
4. Keep Warm Indicator Light
5. Basket Cover
6. Coffee Basket
7. Water Pipe
8. Power Cord

HOW TO OPERATE

WARNING: Never plug the percolator into an outlet without water in the pot. The heating element may be damaged.

1. Add **cold water** to the empty pot according to the number of cups of coffee you want to make (cup levels are marked inside the pot). **Do not add water beyond the 10 cup level.**
2. Lower the water pipe into the percolator pot until you fit the bottom of the water pipe into the divot at the bottom of the pot. Then add the basket to the water pipe.
3. Add coffee to the coffee basket. If making 10 cups, start with $\frac{1}{2}$ cup of coffee, and adjust depending on how strong you like your coffee. The level of coffee should be lower than the edge of the coffee filter by $\frac{1}{2}$ ", or the coffee grounds may overflow during heating.
4. Put the basket cover on the coffee basket. Add the lid and press down to lock it into position.
5. Connect the cord to an outlet and turn on the power to start brewing coffee. **Do not open the lid when the percolator is heating.**
6. When the temperature of the water reaches about 210°F, the pot will stop percolating and switch to keep warm (the indicator light will turn on). This means your coffee is ready.
7. Before pouring the coffee from the pot, remove the water pipe, basket and coffee grounds.
8. Unplug the percolator after using.

CLEANING & CARE

1. Turn off and unplug the percolator.
2. Always allow the percolator to cool completely before cleaning.
3. Disassemble all parts.
4. Do not use abrasive brushes or pads, or harsh cleaning solutions.
5. Hand wash the basket cover, coffee basket and water pipe in warm, soapy water.
6. Rinse the pot with water and wipe it dry with a soft cloth.
7. Wipe the exterior of the pot with a damp cloth.
8. Do not immerse the percolator, its cord, or its plug, into water.
9. Ensure all parts are dried thoroughly before reassembling and using this appliance.

WARRANTY

Ginny's warrants this product free from defects in material and workmanship for one year from provable date of purchase.

Within this warranty period, Ginny's will repair or replace, at its option, defective parts at no charge, provided the product is returned, freight prepaid with proof of purchase to Ginny's. Allow 2-4 weeks for return shipping.

This warranty does not cover improper installation, misuse, abuse or neglect on part of the owner. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

This warranty gives you specific legal rights and they may vary from state to state.

THE FOREGOING WARRANTIES ARE IN LIEU OF ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THOSE OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.



Ginny's, Inc.
1112 7th Avenue
Monroe, WI 53566

Customer Service: 800-544-1590
8:00 a.m. to Midnight CST, Monday through Friday