



# 2 SLICE/4 SLICE TOASTER

## User Guide

Item: 735659 (2 slice), 735657 (4 slice)



***Ginnys.com • 800-544-1590***

** *Facebook.com/GinnysBrand***

** *Pinterest.com/GinnysBrand***

** *Ginnys.com/Blog***

---

---

Thank you for purchasing a Ginny’s Brand Toaster, and congratulations — your mornings just got brighter! You’ll love the easy-to-use controls and wide slots (that can even handle a New York bagel). Whether you purchased the 2 slice or the 4 slice toaster, the results will be the same — a fun addition to your kitchen! Enjoy!

---

---

## TABLE OF CONTENTS

Important Safeguards	3
Electrical Safety and Specifications	4
Get to Know Your Toaster	5
How to Operate	6-7
Cleaning & Care	7
Warranty	8

# IMPORTANT SAFEGUARDS

## **READ CAREFULLY BEFORE USING AND SAVE THESE INSTRUCTIONS!**

- FOR HOUSEHOLD USE ONLY. Do not use this appliance for other than its intended use.
- REMOVE all packaging materials and labels before first use.
- A SHORT CORD is provided to reduce the hazards resulting from entanglement or tripping. Do not drape the cord over the counter or tabletop, where it can be pulled on or tripped over. Never wrap the cord tightly around the appliance, as this could cause the cord to fray or break.
- We do not recommend using an extension cord with this appliance. However, IF AN EXTENSION CORD IS USED, the marked electrical rating should be at least as great as the electrical rating of this appliance.
- CLOSE SUPERVISION is necessary when using this appliance near CHILDREN.
- A fire may occur if this appliance is used near FLAMMABLE MATERIALS, including curtains, towels, walls, etc. Do not place any paper, plastic, or other non-food items in the appliance. Do not place the appliance or its cord on or near a heated surface, or in a heated oven.
- This appliance should always be used on a STABLE, DRY, HEAT-RESISTANT SURFACE. Do not use near water.
- Do not use an accessory or attachment not recommended by Ginny's, as this may cause injury, or damage the appliance.
- Keep hands, hair and clothing away from all MOVING PARTS.
- Always use OVEN MITTS when handling hot food or appliances. Do not attempt to move an appliance when it is hot, or has hot contents.
- Do not use outdoors.
- Turn OFF AND UNPLUG this appliance when not in use.
- NO SERVICEABLE PARTS INSIDE THIS APPLIANCE.
- DO NOT USE AN APPLIANCE WITH A DAMAGED CORD OR PLUG, OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER.
- Do not insert oversized foods. Do not cook or warm rice cakes, fried foods or other items not meant for toasting.
- Never cover the toaster or slots during operation.

# ELECTRICAL SAFETY

This appliance is equipped with a polarized plug in which one prong is wider than the other. This is a safety feature to reduce the risk of electrical shock. The plug should be attached to the appliance before connecting to an electrical outlet. The plug will fit into a polarized outlet only one way. If you are unable to insert the plug into the outlet, try reversing the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way. Ginny's cannot accept any liability for damage or injury resulting from failure to observe these safety procedures.

## SPECIFICATIONS, 2 SLICE TOASTER


POWER RATING	120 V, 60 Hz, 900W
CAPACITY	2 Slice
CORD LENGTH	36"
DIMENSIONS	10 1/2" L x 6 1/2" W x 7 3/8" H
MODEL	MT-2

## SPECIFICATIONS, 4 SLICE TOASTER

POWER RATING	120 V, 60 Hz, 1560W
CAPACITY	4 Slice
CORD LENGTH	36"
DIMENSIONS	11" L x 10 1/2" W x 7 3/8" H
MODEL	MT-4

# GET TO KNOW YOUR TOASTER

1. Toasting Slots
2. Carriage Lever with *Toast Boost*
3. Indicator Lights (4)
4. Cancel Button
5. Reheat Button
6. Defrost Button
7. Bagel Button
8. Browning Dial
9. Removable Crumb Tray

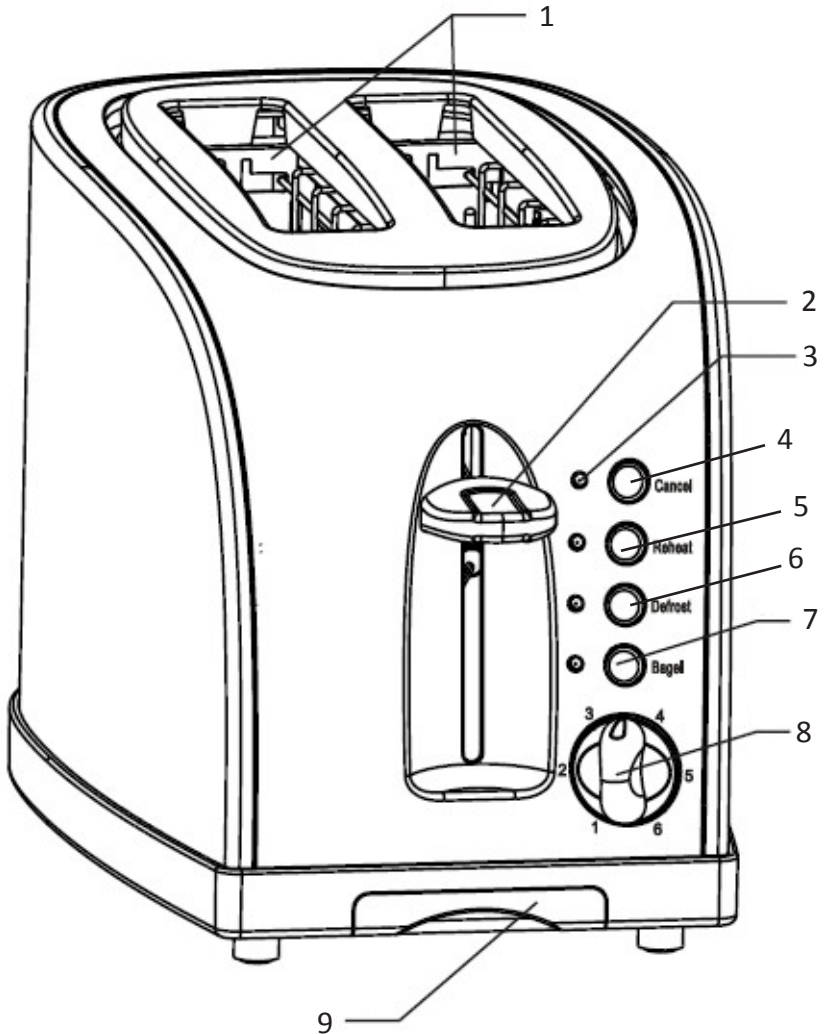

# HOW TO OPERATE

**Note:** The first time you use this toaster, it may smoke a little due to the factory residue burning off. We recommend running it through one or two cycles before actually toasting bread.

## TO TOAST

1. Connect the plug to an outlet.
2. Put the slice(s) of bread into the toaster slot(s).
3. Set the browning dial to desired level.
4. Start the appliance by sliding the carriage lever down until a “click” is heard (the red light by CANCEL will come on during use).
5. When done, the toast will pop up and the toaster will turn off.
6. Unplug the toaster.

## CANCEL BUTTON

Press the CANCEL button at any time to interrupt toasting.

## REHEAT BUTTON

Press the REHEAT button after lowering the carriage lever (the red light by REHEAT will come on) to reheat already toasted bread, bagels, etc. (This function will not continue to toast, it will only reheat for 30-50 seconds.)

## DEFROST BUTTON

Press the DEFROST button after lowering the carriage lever (the red light by DEFROST will come on) to defrost, then toast frozen bread or waffles, etc. (all in one step).

## BAGEL BUTTON

Press the BAGEL button after lowering the carriage lever (the red light by BAGEL will come on) to toast one sided items such as bagels or English muffins. The bagel half in the left slot will be toasted on the left side, and the bagel half in the right slot will be toasted on the right side.

**Note:** Toast boost can be used to help you retrieve small or stuck pieces of bread (lift up on the carriage lever when toast is done.)

# HOW TO OPERATE

**Note:** DEFROST or REHEAT can be used with BAGEL, but DEFROST and REHEAT cannot be used at the same time.

## HELPFUL HINTS

- Do not spread butter or oil on the bread before toasting.
- The browning selection will need to vary depending on the type of bread, the quality of the bread and the thickness of the slices; room temperature bread may toast to a medium color on setting 3, but refrigerated bread may require a higher setting to toast to the same color; the moisture content will also affect toasting (the fresher the bread, the longer it will take to toast).
- English muffins cut with a knife will toast more evenly than English muffins split with a fork.
- If bread becomes jammed, the toaster will automatically shut off at the end of the toasting cycle. Unplug the toaster and let cool. Use a wooden utensil to carefully remove the bread.
- When toasting only one slice, the bread may be placed in any slot of the toaster.
- This toaster is designed for even brownness on both sides of the toast. However, the inner heating elements of the toaster will not be as radiant as the outer heating elements during toasting. This is normal and not a defect.

## CLEANING & CARE

**Note:** We recommend cleaning the crumb tray at least once a week.

1. Turn off and unplug the toaster.
2. Always allow the toaster to cool completely before cleaning.
3. Slide out the crumb tray(s) and discard crumbs. Wipe the tray(s) clean and replace. Never operate the toaster without the crumb tray(s) in place.
4. To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake. Never insert any hard or sharp instruments into a slot, as this could damage the toaster and cause a safety hazard.
5. Wipe the exterior with a damp cloth and dry.
6. Do not immerse any electrical appliance, its cord or plug, into water.

# WARRANTY

Ginny's warrants this product free from defects in material and workmanship for one year from provable date of purchase.

Within this warranty period, Ginny's will repair or replace, at its option, defective parts at no charge, provided the product is returned, freight prepaid with proof of purchase to Ginny's. Allow 2-4 weeks for return shipping.

This warranty does not cover improper installation, misuse, abuse or neglect on part of the owner. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

This warranty gives you specific legal rights and they may vary from state to state.

THE FOREGOING WARRANTIES ARE IN LIEU OF ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THOSE OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.



Ginny's, Inc.  
1112 7th Avenue  
Monroe, WI 53566

Customer Service: 800-544-1590  
8:00 a.m. to Midnight CST, Monday through Friday