



FOUR SLICE LONG TOASTER User Guide

Item: 740607



Ginnys.com • 800-544-1590

 Facebook.com/GinnysBrand

 Pinterest.com/GinnysBrand

 Ginnys.com/Blog

Thank you for purchasing a Ginny’s Brand Four Slice Long Toaster. This toaster will look great on your kitchen counter while it easily toasts four regular slices of bread, or two slices of pan-style breads — from rye to sourdough. French bread? Have no fear! The 1 1/4” wide slots even handle bagels without getting stuck. Enjoy!

TABLE OF CONTENTS

Important Safeguards	3
Electrical Safety and Specifications	4
Get to Know Your Toaster	5
How to Operate	6
Cleaning & Care	7
Warranty	8

IMPORTANT SAFEGUARDS

READ CAREFULLY BEFORE USING AND SAVE THESE INSTRUCTIONS!

- FOR HOUSEHOLD USE ONLY. Do not use this appliance for other than its intended use.
- REMOVE all packaging materials and labels before first use.
- WASH all removable parts before first use. See Cleaning & Care.
- A SHORT CORD is provided to reduce the hazards resulting from entanglement or tripping. Do not drape the cord over the counter or tabletop, where it can be pulled on or tripped over.
- We do not recommend using an extension cord with this appliance. However, IF AN EXTENSION CORD IS USED, the marked electrical rating should be at least as great as the electrical rating of this appliance.
- CLOSE SUPERVISION is necessary when using this appliance near CHILDREN.
- A fire may occur if this appliance is used near FLAMMABLE MATERIALS, including curtains, towels, walls, etc. Do not place any paper, plastic, or other non-food items in the appliance. Do not place the appliance or its cord on or near a heated surface, or in a heated oven.
- This appliance should always be used on a STABLE, DRY, HEAT-RESISTANT SURFACE. Do not use near water.
- Do not use an accessory or attachment not recommended by Ginny's, as this may cause injury, or damage the appliance.
- Keep hands, hair and clothing away from all MOVING PARTS.
- Always use OVEN MITTS when handling hot food or appliances. Do not attempt to move an appliance when it is hot, or has hot contents.
- Do not use outdoors.
- Turn OFF AND UNPLUG this appliance when not in use.
- NO SERVICEABLE PARTS INSIDE THIS APPLIANCE.
- DO NOT USE AN APPLIANCE WITH A DAMAGED CORD OR PLUG, OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER.
- Oversized foods, metal foil packages or utensils must not be inserted in the toaster, as they may involve a risk of fire or electrical shock.
- Do not attempt to dislodge food when the toaster is plugged into an electrical outlet.


ELECTRICAL SAFETY

This appliance is equipped with a polarized plug in which one prong is wider than the other. This is a safety feature to reduce the risk of electrical shock. The plug should be attached to the appliance before connecting to an electrical outlet. The plug will fit into a polarized outlet only one way. If you are unable to insert the plug into the outlet, try reversing the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way. Ginny's cannot accept any liability for damage or injury resulting from failure to observe these safety procedures.

SPECIFICATIONS

POWER RATING	120 V, 60 Hz, 1200 W
CAPACITY	4 slices
CORD LENGTH	24"
DIMENSIONS	14 " L x 5 3/4" W x 7 1/4" H
MODEL	KS-2130A

GET TO KNOW YOUR TOASTER

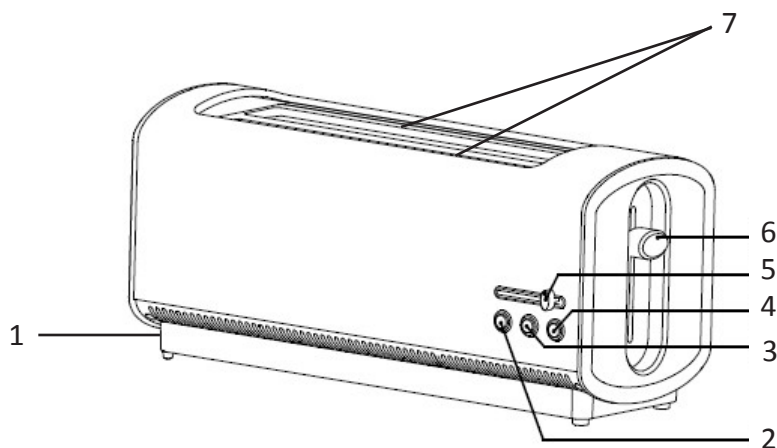

1. Crumb tray
2. Reheat Button
3. Defrost Button
4. Cancel Button
5. Browning Selection Lever
6. Carriage Lever
7. Slots (2)

HOW TO OPERATE

Note: the first time you use this toaster, it may smoke a little due to the factory residue burning off. We recommend running it through one or two cycles before actually toasting bread.

TO TOAST

1. Connect the plug to an outlet.
2. Put the slice(s) of bread into the toaster.
3. Set the browning selector to desired level.
4. Start the appliance by sliding the carriage lever down until a “click” is heard. The blue light above CANCEL will come on.
5. After the selected toasting time, the toast will pop up and the toaster will turn off.
6. Unplug the toaster.

TO CANCEL

Press the CANCEL button at any time to interrupt toasting.

TO REHEAT

Press the REHEAT button after lowering the carriage lever to reheat already toasted bread, bagels, etc. (This function will not continue to toast, it will only reheat.)

TO DEFROST

Press the DEFROST button after lowering the carriage lever to defrost, then toast frozen bread or waffles, etc. (all in one step).

CLEANING & CARE

1. Turn off and unplug the appliance.
2. Always allow the appliance to cool completely before cleaning.
3. Slide out the crumb tray and discard crumbs. Wipe the tray clean and replace it. Never operate the toaster without the crumb tray in place.
4. To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake. Never insert any hard or sharp instruments into the slot, as this could damage the toaster and cause a safety hazard.
5. Wipe the exterior with a damp cloth and dry.
6. Do not immerse any electrical appliance, its cord or plug, into water.
7. Never wrap the cord around the outside of the toaster. Wind the cord around the hooks on the underside of the toaster.

WARRANTY

Ginny's warrants this product free from defects in material and workmanship for one year from provable date of purchase.

Within this warranty period, Ginny's will repair or replace, at its option, defective parts at no charge, provided the product is returned, freight prepaid with proof of purchase to Ginny's. Allow 2-4 weeks for return shipping.

This warranty does not cover improper installation, misuse, abuse or neglect on part of the owner. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

This warranty gives you specific legal rights and they may vary from state to state.

THE FOREGOING WARRANTIES ARE IN LIEU OF ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THOSE OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.



Ginny's, Inc.
1112 7th Avenue
Monroe, WI 53566

Customer Service: 800-544-1590
8:00 a.m. to Midnight CST, Monday through Friday