

Montgomery  
Ward®

Montgomery  
Ward®

Perfect  
toast —  
every  
time!

## 2 Slice/4 Slice Toaster



## Instruction Manual

ITEM: 760104/760103

Montgomery Ward Customer Service  
3650 Milwaukee Street, Madison, WI 53714  
8:00 am to Midnight, Monday through Friday

**Wards.com 1•888•557•3848**

**Wards.com 1•888•557•3848**



Thank you  
for your  
purchase!

Thank you for purchasing this Montgomery Ward Toaster. Put through the paces by the experts, we guarantee that it will perform to the highest standard, time after time, with all the convenience, easy clean-up and durability you rely on from Wards.

## Table of Contents

Important Safeguards .....	3
Electrical Safety .....	4
Specifications.....	4
Parts & Features.....	5
How to Use .....	6
Helpful Hints .....	7
Cleaning & Care.....	7
Return Information .....	8
Warranty.....	9

## Important Safeguards

### READ CAREFULLY BEFORE USING AND SAVE THESE INSTRUCTIONS!

- FOR HOUSEHOLD USE ONLY. Do NOT use this appliance for other than itsintended use.
- REMOVE all packaging materials before first use. Please dispose of the packaging materials via the appropriate recycling system, in an environmentally-friendly manner.
- A SHORT CORD is provided to reduce the hazards resulting from entanglement or tripping. Do not drape the cord over the counter or tabletop, where it can be pulled on or tripped over. Never wrap the cord tightly around the appliance, as this could cause the cord to fray or break.
- We do NOT recommend using an extension cord with this appliance. However, if an extension cord is used, the marked electrical rating should be at least as great as the electrical rating of this appliance.
- CLOSE SUPERVISION is necessary when using this appliance near CHILDREN.
- NEVER leave toaster unattended when in use.
- A fire may occur if this appliance is used near FLAMMABLE MATERIALS, including curtains, towels, walls, etc. Do not place any paper, plastic, or other non-food items in the appliance. Do not place the appliance or its cord on or near a hot gas or electric burner or in a heated oven. . Do not attempt to dislodge food when toaster is plugged in.
- This appliance should always be used on a STABLE, DRY, HEAT-RESISTANT SURFACE. Do NOT use near water.
- Do NOT use an accessory or attachment not recommended by Wards, as this may cause injury, or damage the appliance.
- DO NOT touch hot surfaces. Use handles or knobs.
- Do NOT use outdoors.
- Turn OFF AND UNPLUG this appliance when not in use.
- NO SERVICEABLE PARTS INSIDE THIS APPLIANCE. Call 888-557-3848 for service.
- DO NOT USE AN APPLIANCE WITH A DAMAGED CORD OR PLUG, OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER.
- Do NOT insert oversized foods. Do NOT cook or warm rice cakes, fried foods or other items not meant for toasting.
- NEVER cover the toaster or slots during operation.
- Old appliances/tools contain valuable materials that can be recycled. Please dispose of your old appliances/tools using appropriate collection systems.
- DO NOT immerse cord, plugs, or appliance in water or other liquid.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.

## SAVE THESE INSTRUCTIONS


## Electrical Safety

**This appliance is equipped with a polarized plug in which one prong is wider than the other.** This is a safety feature to reduce the risk of electrical shock. The plug will fit into a polarized outlet only one way. If you are unable to insert the plug into the outlet, try reversing the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way. Montgomery Ward can not accept any liability for damage or injury resulting from failure to observe these safety procedures.

## Specifications

<b>POWER RATING</b>	<b>120V, 60Hz, 900W/1500W</b>
<b>CAPACITY</b>	<b>2-slice/4-slice</b>
<b>CORD LENGTH</b>	<b>32"/32"</b>
<b>DIMENSIONS</b>	<b>7.5"x11"x7.75"/12"x11.5"x8.25"</b>
<b>MODEL</b>	<b>VE95/VE100</b>

## Parts & Features

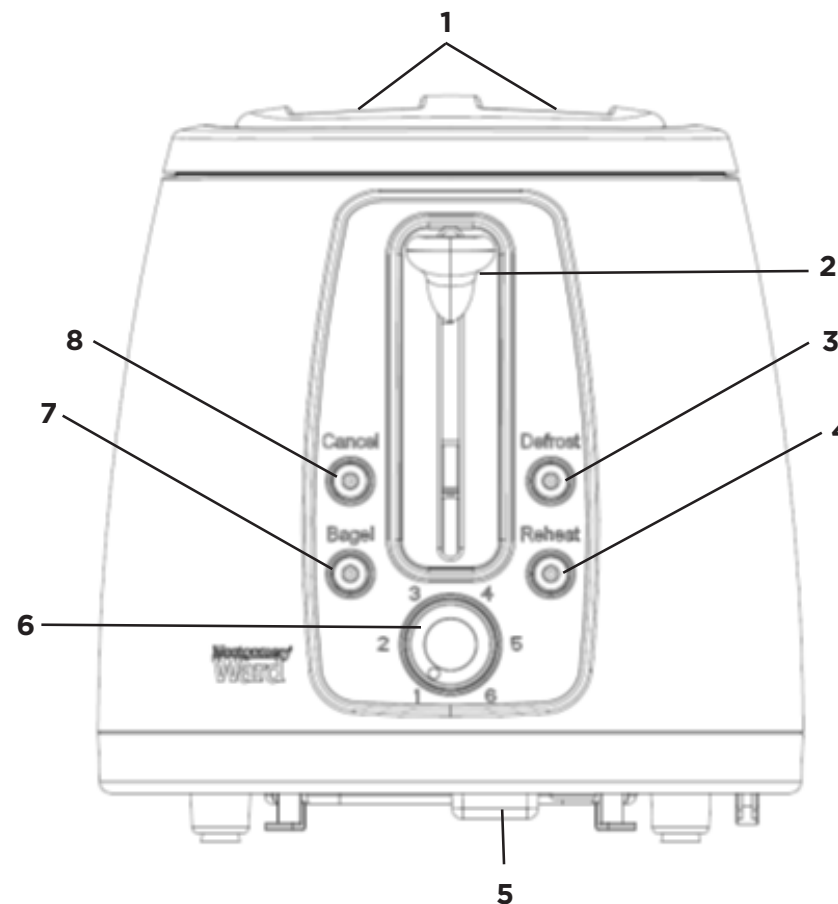

1. Slots
2. Carriage Lever
3. Defrost Button
4. Reheat Button
5. Crumb Tray
6. Browning Dial
7. Bagel Button
8. Cancel Button

**Note:** The first time you use this toaster, it may smoke a little due to the factory residue burning off. We recommend running it through one or two cycles before actually toasting bread.

### TO TOAST

1. Connect the plug to an outlet.
2. Put the slice(s) of bread into the toaster slot(s).
3. Set the browning dial to desired setting. (Breads with very uneven surfaces will require a higher browning setting.)
4. Start the appliance by sliding the carriage lever down until it latches (the lever will not latch if the toaster is not plugged in). The CANCEL button will light up.
5. When done, the toast will pop up and the toaster will turn off.
6. Unplug the toaster and carefully remove the toast.

**Note:** Lift up on the carriage lever to help retrieve small or stuck pieces of bread when toast is done.

### CANCEL BUTTON

Press the CANCEL button at any time to interrupt toasting.

### DEFROST BUTTON

To defrost, then toast frozen bread or waffles, etc. (all in one step). Press the DEFROST button after lowering the carriage lever. The DEFROST button will light up.

### BAGEL BUTTON

To toast one-sided items such as bagels or English muffins. The piece placed in the left slot will be toasted on the right side, and the piece placed in the right slot will be toasted on the left side. Press the BAGEL button after lowering the carriage lever. The BAGEL button will light up.

### REHEAT BUTTON

To reheat already toasted bread, bagels, etc. (This function will not continue to toast, it will only reheat for 30-50 seconds.) Press the REHEAT button after lowering the carriage lever. The REHEAT button will light up.

**Note:** DEFROST or REHEAT can be used with BAGEL, but DEFROST and REHEAT cannot be used at the same time.

### Tips

- Do NOT spread jelly, butter or oil on the bread before toasting.
- Change the browning setting depending on the type of bread, the quality of the bread, the thickness of the slices and the moisture content.
- English muffins cut with a knife will toast more evenly than English muffins split with a fork.
- If bread becomes jammed, the toaster will automatically shut off at the end of the toasting cycle. **Unplug the toaster and let cool.** Lift up on the carriage lever and use a wooden utensil to carefully remove the bread.
- When toasting only one slice, the bread may be placed in any slot.
- This toaster is designed for even browning on both sides of the toast. However, the inner heating elements of the toaster will not appear to be as radiant as the outer heating elements during toasting. This is normal and not a defect.
- When toasting raisin or other fruit breads, remove any loose pieces of fruit from the surface before toasting.

## Cleaning & Care

**Note:** We recommend cleaning the crumb tray at least once a week.

1. Turn off and unplug the toaster.
2. Always allow the toaster to cool completely before cleaning.
3. Slide out the crumb tray(s) and discard crumbs. Wipe the tray(s) clean and replace. Never operate the toaster without the crumb tray(s) in place.
4. To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake. Never insert any hard or sharp instruments into a slot, as this could damage the toaster and cause a safety hazard.
5. Wipe the exterior with a damp cloth and dry completely.
6. Do not immerse any electrical appliance, its cord or its plug, into water.

## Returns

If any item, for any reason, does not meet your expectations, just return it to us. We'll gladly either:

- Refund your merchandise amount
- Credit your account
- Send a replacement

You can return any unused item in its original packaging within 60 days of its receipt for a full refund of the purchase price (excluding shipping and handling charges).

**Please send returns to:**

**Montgomery Ward, Inc.  
Attn: Customer Returns  
2000 Harrison Suite 100  
Clinton, IA 52732-6676**

**When returning an item:**

- Use the original packaging and pack it securely.
- Please adequately insure your item in case you need to make a claim with the carrier you choose for returning your item.
- Include your order number and reason for return.
- We recommend keeping the receipt for 4 weeks.

# Montgomery Ward®

## 1 Year Limited Warranty

Montgomery Ward, Inc. warrants this product to be free from defects in material and workmanship for one year from provable date of purchase.

Within this warranty period, Montgomery Ward will repair or

replace, at its option, defective parts of this product at no charge, provided the product is returned, freight prepaid with proof of purchase to Montgomery Ward.

Allow 2-4 weeks for return shipping.

This warranty does not cover improper installation, misuse, abuse or neglect on part of the owner. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

This warranty gives you specific legal rights and they may vary from state to state.

THE FOREGOING WARRANTIES ARE IN LIEU OF ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THOSE OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Montgomery Ward Customer Service  
8:00 am to Midnight CST, Monday through Friday

**Wards.com 1-888-557-3848**

