



GLASS WINDOW TWO SLICE TOASTER

User Guide

ITEM 736712



Ginnys.com • 800.544.1590

 Facebook.com/GinnysBrand

 Pinterest.com/GinnysBrand

 Ginnys.com/Blog

"Life is happening.

We'll help you live it. . . one moment at a time. "



Thank you for purchasing a Ginny's Brand Glass Window Toaster. The glass windows let you watch your toast as it browns to perfection, and you can customize the browning with 6 settings. This toaster will make a charming addition to ANY kitchen! Enjoy!

Ginny

President, Ginny's

TABLE OF CONTENTS

Important Safeguards	3
Electrical Safety & Specifications	4
Get to Know Your Toaster	5-6
How to Operate	7-9
Cleaning & Care	10
Warranty	11

IMPORTANT SAFEGUARDS

READ CAREFULLY BEFORE USING & SAVE THESE INSTRUCTIONS!

- FOR HOUSEHOLD USE ONLY. Do not use this appliance for other than its intended use.
- Remove all packaging materials and labels before first use.
- A SHORT CORD is provided to reduce the hazards resulting from entanglement or tripping. If the cord is DETACHABLE, always attach it to the appliance first, then to the electrical outlet. The cord should not drape over the counter or tabletop, where it can be pulled on or tripped over.
- We do not recommend using an extension cord with this appliance. However, IF AN EXTENSION CORD IS USED, the marked electrical rating should be at least as great as the electrical rating of this appliance.
- CLOSE SUPERVISION is necessary when using this appliance near CHILDREN.
- A fire may occur if this appliance is used near FLAMMABLE MATERIALS, including curtains, towels, walls, etc. Do not place any paper, plastic, or other non-food items in the appliance. Do not place the appliance or its cord on or near a heated surface, or in a heated oven.
- This appliance should always be used on a stable, dry, HEAT-RESISTANT surface.
- Do not use an accessory or attachment not recommend by Ginny's, as this may cause injury, or damage the appliance.
- Keep hands, hair and clothing away from all MOVING PARTS.
- Always use OVEN MITTS when handling hot food or appliances. Do not attempt to move an appliance when it is hot or has hot contents.
- Do not use outdoors.
- Turn OFF AND UNPLUG this appliance when not in use.
- NO SERVICEABLE PARTS INSIDE THIS APPLIANCE.
- DO NOT USE AN APPLIANCE WITH A DAMAGED CORD OR PLUG, OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER.


ELECTRICAL SAFETY

This appliance is equipped with a three-prong grounding plug. This is a safety feature to reduce the risk of electrical shock. Using an extension cord is not recommended with this appliance. The plug should be attached to the appliance before connecting to an electrical outlet. It is recommended that an electrical outlet serving ONLY this appliance be used. This outlet must be properly installed and grounded. If you have any questions about the grounding or electrical instructions, contact a qualified electrician. Do not attempt to modify the plug in any way. Ginny's cannot accept any liability for damage or injury resulting from failure to observe these safety procedures.

SPECIFICATIONS

Power Rating:	120 volts, 60 Hz, 1250 W
Cord Length:	20"
Overall Dimensions:	10 1/2"L x 8"W x 8 5/8"H
Model:	JS2509W


GET TO KNOW YOUR TOASTER

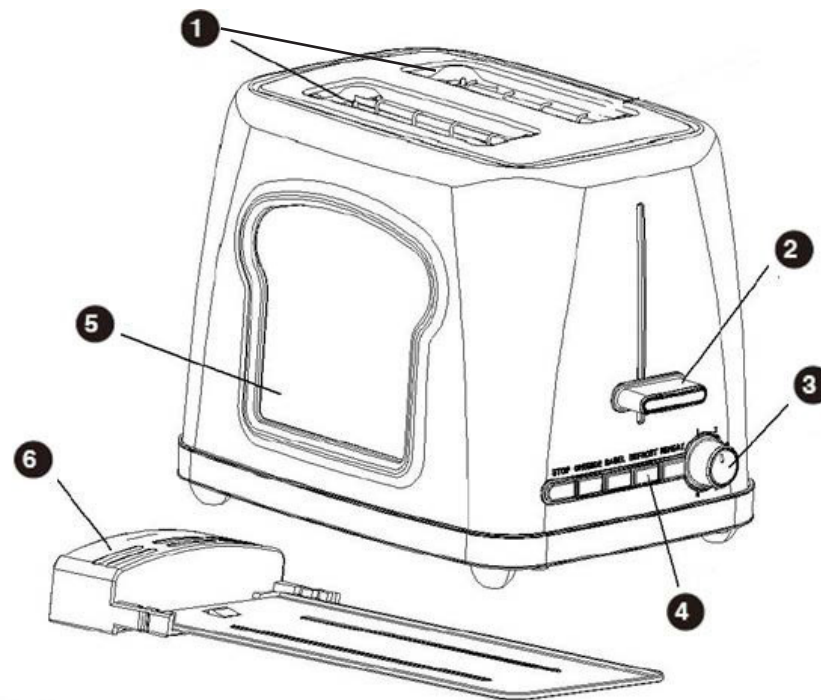

1. Toaster Slots
2. Carriage Control Lever
3. Browning Control Dial
4. Function Buttons (see descriptions on page 6)
5. Glass Window (2)
6. Slide-out Crumb Tray

(continued on page 6)

GET TO KNOW YOUR TOASTER

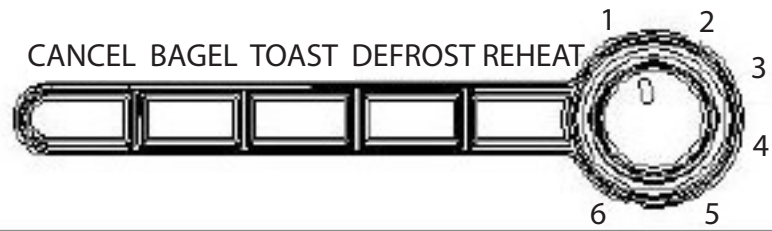

CANCEL Button: Allows you to immediately stop the toasting cycle at any time.

BAGEL Button: This feature enables you to toast just one side of the bread. Ideal for toasting breads such as bagels, baguettes and English muffins.

TOAST Button: This button is for basic, double-sided toasting.

DEFROST Button: Lets you toast frozen foods. The toasting time will be altered to first defrost, and then toast to your chosen setting.

REHEAT Button: This is a handy feature for when your toast cycle is complete before you are ready. You can reheat the toast, without adding to the browning.

HOW TO OPERATE

Tips:

1. Toasting is a combination of cooking and drying of the bread. The differences in moisture level from one bread to another can result in varying toasting times.

- For slightly dry bread, use a lower setting.
- For very fresh bread or whole wheat bread, use a higher setting.
- Breads with very uneven surfaces (such as English muffins) will require a higher toast setting.
- When toasting raisin or other fruit breads, remove any loose raisins, etc. from the surface of the bread before placing into the toaster. This will help prevent fruit pieces from falling into the toaster or sticking on the guide wires.

2. Never force foods into the toasting slot.

3. Do not place buttered breads or pastries with frosting in the toaster, as this could create a fire hazard.

4. If you are toasting continuously, use a lower setting after the first use, as the toaster is preheated.

5. If you are toasting a single slice of bread, set the heat selector to a lighter setting than you normally would. The toaster is designed to heat the whole toasting chamber for two slices. By lowering the heat for a single slice, you won't over-toast.

HOW TO OPERATE

BAGEL Button:

The bagel half in the left slot will toast the left side, and the bagel half in the right slot will toast the right side (you can see the toasting sides through the windows).

1. Insert slice(s) of bread or halved bagel.
2. Set the browning control to desired level:

Dial Setting	Browning Level
1-2	Light
3-4	Medium
5-6	Dark

3. Press the carriage lever until it locks into the down position.
4. Press the BAGEL button to start. LED indicates feature is activated.
5. When the cycle is complete, the toaster will raise the bagel. If you wish to stop the cycle before it is finished, simply press the CANCEL button to interrupt. After use, unplug the toaster from the outlet.

TOAST Button:

1. Insert slice(s) of bread.
2. Set the browning control to desired level:

Dial Setting	Browning Level
1-2	Light
3-4	Medium
5-6	Dark

3. Press the carriage lever until it locks in the down position.
4. The bread will automatically toast, or you can press the TOAST button to start. LED indicates feature is activated.
5. When the cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simply press the CANCEL button to interrupt. After use, unplug the toaster from the outlet.

HOW TO OPERATE

DEFROST Button:

1. Insert slice(s) of bread or other item.
2. Set the browning control to desired level:

Dial Setting	Item
1-2	Refrigerated breads or thinner frozen items (like pancakes)
3-4	Toaster pastries, frozen waffles, french toast
5-6	Thicker frozen items or hand-cut bread

3. Press the carriage lever until it locks in the down position.
4. Press the DEFROST button to start. LED indicates feature is activated.
5. When the cycle is complete, the toaster will raise the bread or other item. If you wish to stop the cycle before it is finished, simply press the CANCEL button to interrupt. After use, unplug the toaster from the outlet.

REHEAT Button:

1. Insert slice(s) of bread.
2. Regardless of the browning control setting, the toaster will reheat approximately 30-40 seconds.
3. Press the carriage lever until it locks into the down position.
4. Press the REHEAT button to start. LED indicates feature is activated.
5. When the cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simply press the CANCEL button to interrupt. After use, unplug the toaster from the outlet.

CLEANING & CARE

1. Allow the toaster to cool completely before cleaning.
2. Unplug the toaster from the electrical outlet before cleaning.
3. Do not use harsh cleaners. Simply wipe the exterior with a clean, damp cloth and dry thoroughly.
4. Slide out the crumb tray, and discard crumbs. Wipe clean and replace.
Never operate the toaster without the crumb tray in place.
5. To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake. Never insert any hard or sharp instruments into the slots, as this could damage the toaster and cause a safety hazard.
6. Never wrap the cord around the outside of the toaster. Instead, wind the cord around the hooks on the underside of the cooled toaster.
7. Do not immerse toaster in water.

WARRANTY

Ginny's warrants this product free from defects in material and workmanship for one year from provable date of purchase.

Within this warranty period, Ginny's will repair or replace, at its option, defective parts at no charge, provided the product is returned, freight prepaid with proof of purchase to Ginny's. Allow 2-4 weeks for return shipping.

This warranty does not cover improper installation, misuse, abuse or neglect on part of the owner.
Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

This warranty gives you specific legal rights and they may vary from state to state.
THE FOREGOING WARRANTIES ARE IN LIEU OF ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THOSE OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Ginny's Customer Service
800.544.1590
8 am to Midnight, Monday through Friday



Ginny's Inc.
1112 7th Avenue
Monroe, WI 53566