






## *OneStepAhead*<sup>®</sup> Nylon Bed Cover Instructions

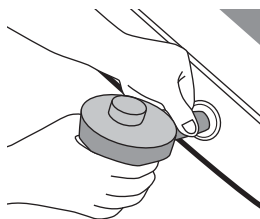


- 1 Inflate bed to approximately 80% capacity. This will make it easier to fit the Bed Cover. You can inflate the bed fully at the end, after the Bed Cover is fitted properly.

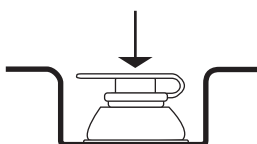


- 2 Push the outer master valve in, until it sits flush with the bed.

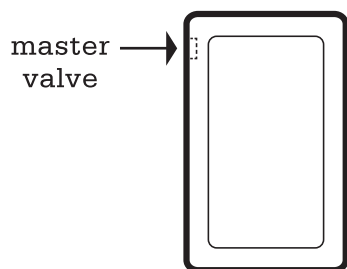

- 3 Stand the bed vertically in front of you. The underside of the bed should face you, and the master valve should be on the top left hand side. Make sure the logo on either end is visible from the outside. If not, reverse the material because it is inside out.

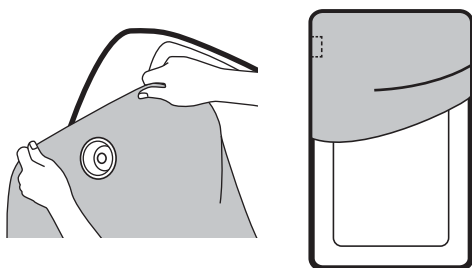

- 4 Hold the Bed Cover from two corners. Place the Bed Cover over the top two corners of the bed. Make sure the circular hole in the Bed Cover aligns with the bed's master valve.

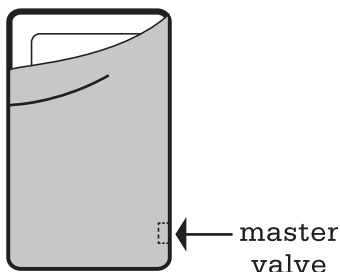

- 5 Rotate the bed 180 degrees. Pull the Bed Cover over the remaining two corners.
- 6 Adjust fit as needed. Inflate the bed fully.
- 7 To remove, pull one corner off at a time and fold for storage.